

WASHER PUMP REPAIR KIT INSTRUCTIONS

INSTRUCTIONS

Repair pump while installed on motor. Note position of original components. Do not use pump without solvent.

1. Remove components A, B, C, D & E.
2. Clean all mating surfaces.
3. Install new components in reverse order.
4. Check hoses for damage or leaks.
5. Flush and clean the reservoir then refill with proper solvent.
6. Prime the pump by activating 4 to 6 times.

