

DOOR TRIM PANEL SPECIAL FIT PROCEDURE

CHRYSLER, DODGE, PLYMOUTH MINI VAN

The air duct on some 2001 Mini Van door trim panels may interfere with the New Window Regulator. If the door trim panel will not fit in place after installing the New regulator the modification below is needed.

Tools required: Electric Heat gun

Fit Procedure:

1. Complete all work on the door and prepare the Trim Panel for final installation. Make sure all panel clips are installed on trim panel and water shield is in place.
2. See figure 1; Remove any insulating material over the duct area to be heated.
3. With the electric heat gun, slightly heat the air duct on the trim panel. Heat the lower middle edge edge below the identification markings until the plastic is pliable.
Note: do not apply excessive heat.
4. Quickly connect the door switch connectors and handle rod. The plastic will remain pliable for at least 1 minute.
5. While the duct is pliable complete the installation of the trim panel and press in place.

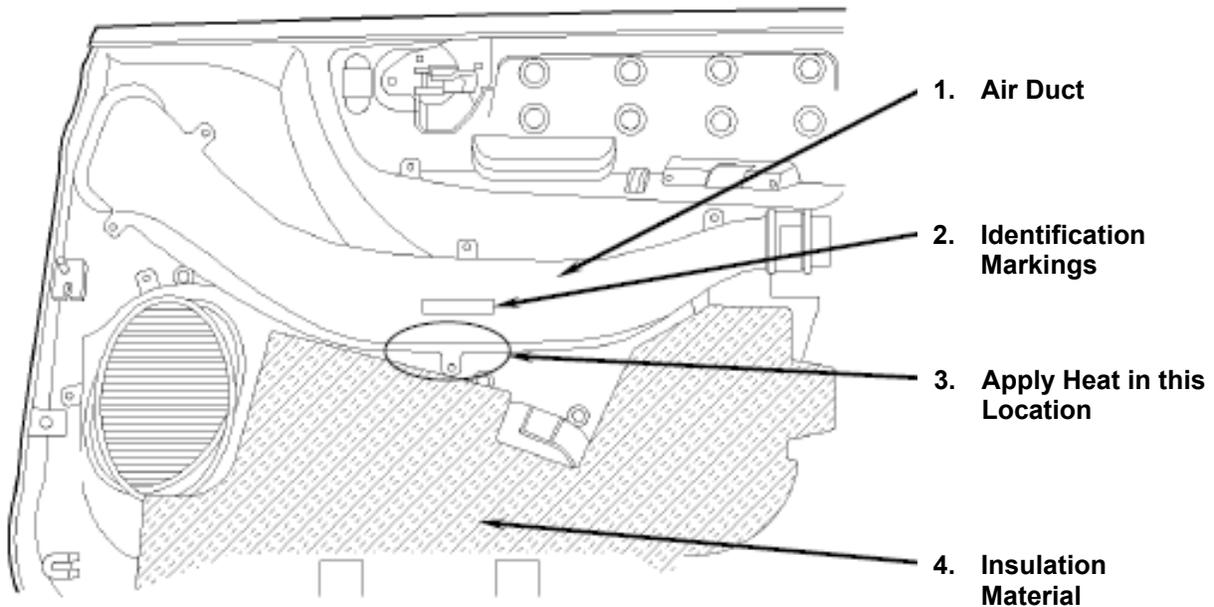


Figure 1