


POWER WINDOW REGULATOR INSTRUCTION SHEET

1998-2003 Dodge Durango

1998-2000 Models

1. Remove the inner door trim panel.
2. Verify if the door panel has H4, H5 and H6 holes (see figure 1). If so, install the regulator to the door panel. Then screw the bolts in the order of 4, 5 and 6 (see figure 2). If there are no H4, H5 or H6 holes, please see the next section of this instruction sheet.

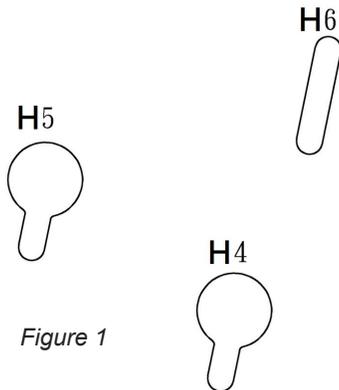

2001-2003 Models

1. Remove the inner door trim panel.
2. Verify if the door panel has H1, H2 and H3 holes (see figure 3). If so, install the regulator to the door panel. Then screw the bolts in the order of 1, 2 and 3 (see figure 1). If there are no H1, H2 or H3 holes, please see the previous section of this instruction sheet.

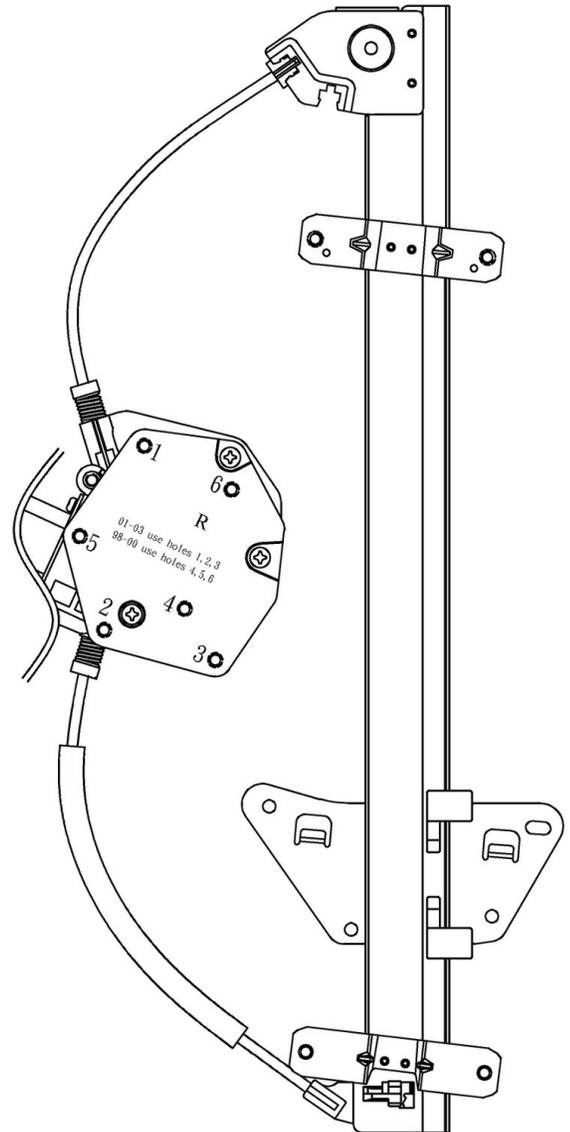
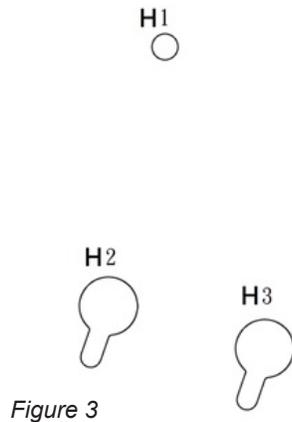


Figure 2