



Gear Installation Instructions
2016-2011 KIA Sportage; 2015-2010 Hyundai Tuscon
Front Left & Front Right

Step 1: Use a tool to pry gear from the original window motor (must be the O.E. motor) and the replacement motor.

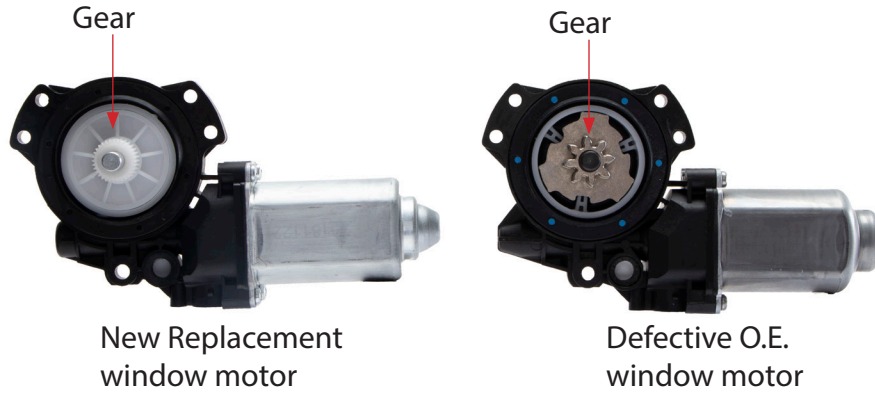

Step 2: Install O.E. gear on the replacement motor.

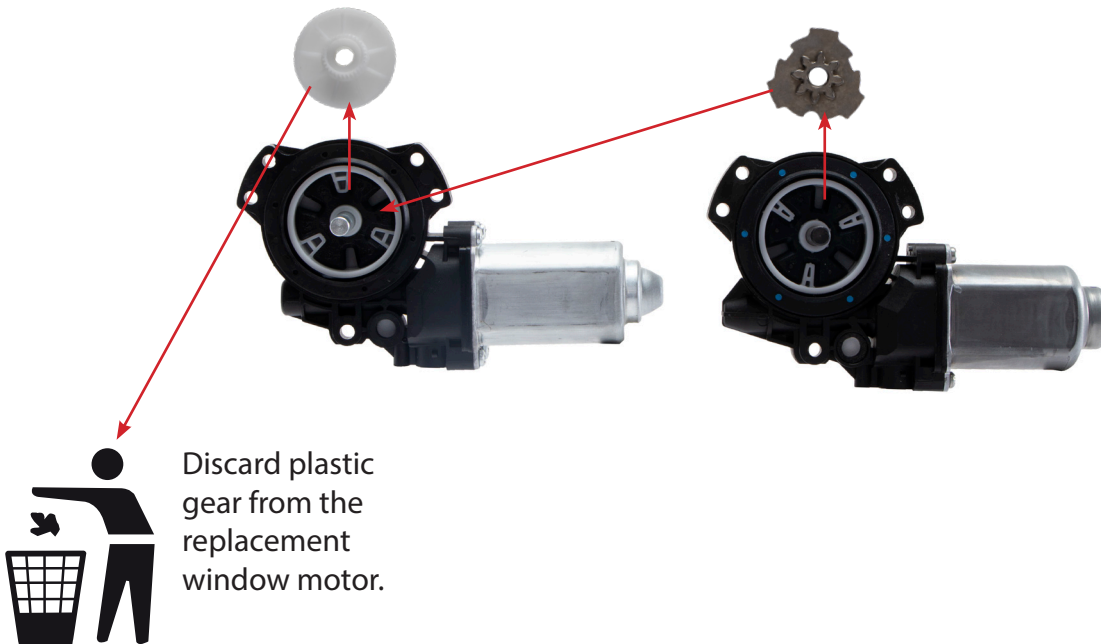

Final Result

