


WINDSHIELD WASHER PUMP REPLACEMENT PROCEDURE

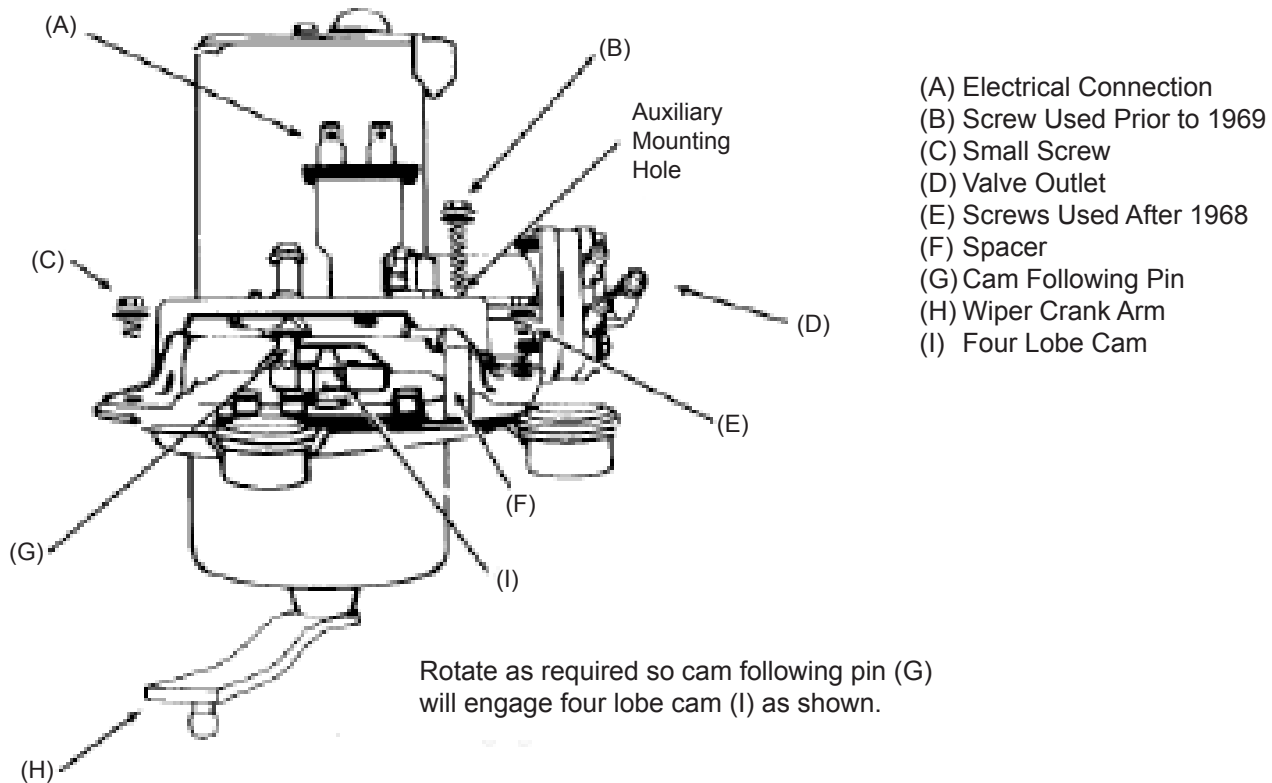

INSTRUCTIONS

Do not use pump without solvent.

1. Disconnect electrical (A) and hose connections.
2. Remove two screws (C) and (E) and remove pump.
3. Remove four lobe cam (I) with screw driver or gear puller. Install new cam.
4. Remove dust cover from new pump.

1963-68 Models

5. Install new pump and use screw (B) and spacer (F).

1969 and Later Models

6. Install new pump and use two screws (C) and (E).
7. If needed, rotate wiper crank arm (H) for alignment with the cam following pin (G). See illustration.
8. Replace dust cover. Check hoses for damage or leaks. Flush and clean the reservoir and attach electrical and hose connections then refill with proper solvent. Prime the pump by activating 4 to 6 times.